

Duick Start

TXS 3600 High Density Transcoder



Congratulations on purchasing the TXS 3600. Follow these installation and configuration instructions to get started. Use the web interface for easiest configuration. If you need assistance please contact Sencore ProCare for technical assistance or visit sencore.com/support.



Contents

Unpack the TXS 3600 from the box and packaging materials it was shipped in. Verify all of the following items are present:

- TXS 3600 High Density Transcoder
- Line Cords




If any of these items are missing or damaged, please contact Sencore to obtain replacements.




Installation

1. Secure the TXS 3600 into the rack space.

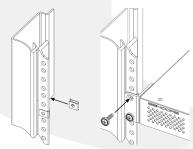

- 2.Make all appropriate I/O connections on the back of the unit.
- 3. Connect an Ethernet cable from a management network, to the Control port.
- 4. Connect the line cord(s).

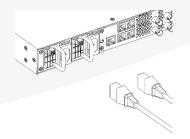



Management Port

The TXS 3600 can be managed through its web interface or SNMP. To use the web interface or SNMP, the management IP address must be configured. Contact your IT department if you are unsure of these settings.

- 1. Press any button on the front panel
- 2.Use and to move the cursor to "Network Settings," then press EXTER
- 3.Use and to move the cursor to "Settings," then press



DHCP IP Address Setup:

- 1.Use and to move the cursor to "DHCP," then press
- 2.Use and to move the cursor to "Apply," then press

Static IP Address Setup:

- 1.Use and to move the cursor to "Static," then press
- 2.Use and to move the cursor to "IP Address," then press
- 3.Use and to select the column to edit and use and and to change the values, then press
- 4.Use the procedure in the previous 2 steps to set the Subnet Mask
- 5.Once the IP Address, Subnet Mask, and Gateway have been set, use and 🔽 to move the cursor to "Apply," then press 📟

Open a web browser (IE7 or above, Firefox 3.5 or above, or Chrome) and type: http://<IP Address> Default password is mpeq101